MANUAL

AGARO

FRENCH PRESS COFFEE MAKER

Model: Classic
Item No: 33933

How to Brew Perfect French Press Coffee

Step 1

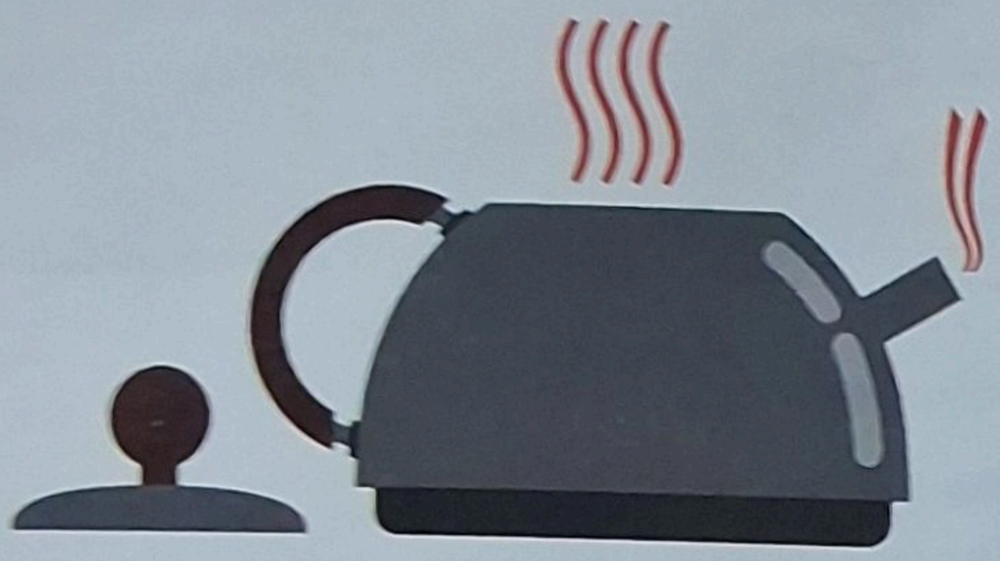

- Boil the Water

Step 2

- Fill french press 1/4 full with hot water

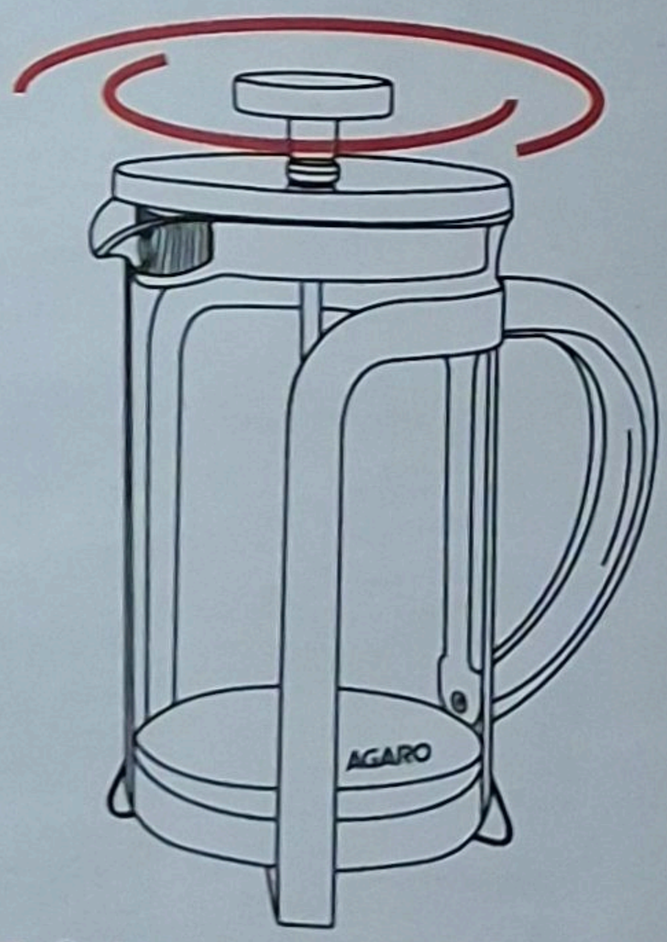

- Swirl hot water inside french press for 10 seconds
- Pull plunger up, remove lid
- Discard rinse water

Step 3

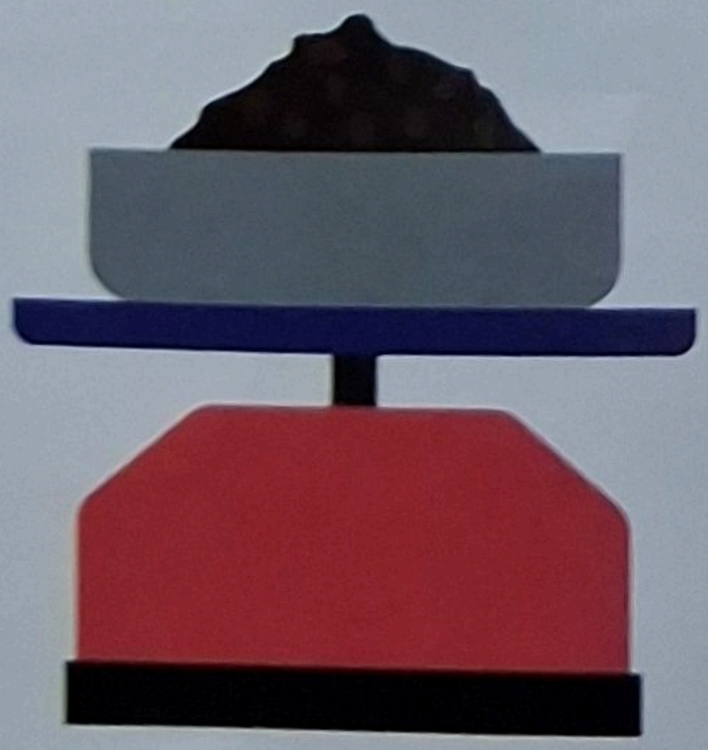

- Use 2 tablespoons (10.06g) of coarse ground coffee beans per 180ml of water. For a weaker brew use about 1.5 TBSP per 180ml water. For a stronger brew, use 2.5TBSP per 180ml water.
- For example : if you want to make 3 cups of coffee, you would need to measure out 6TBSP of coarse coffee grounds and 540ml of hot water.

Step 4

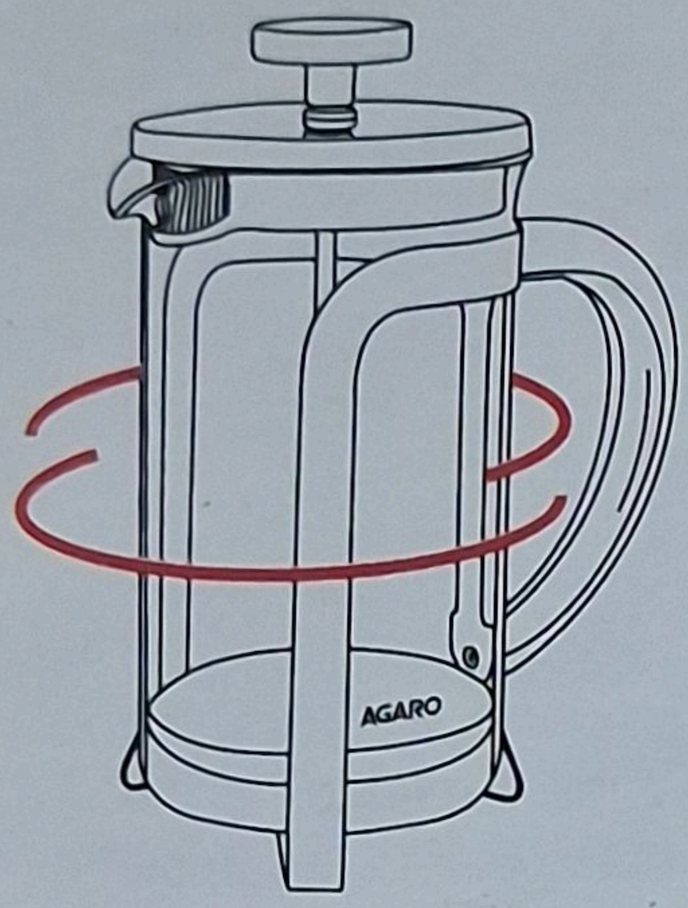

- Pour ground coffee into french press
- Gently shake back and forth to settle grounds

Step 5

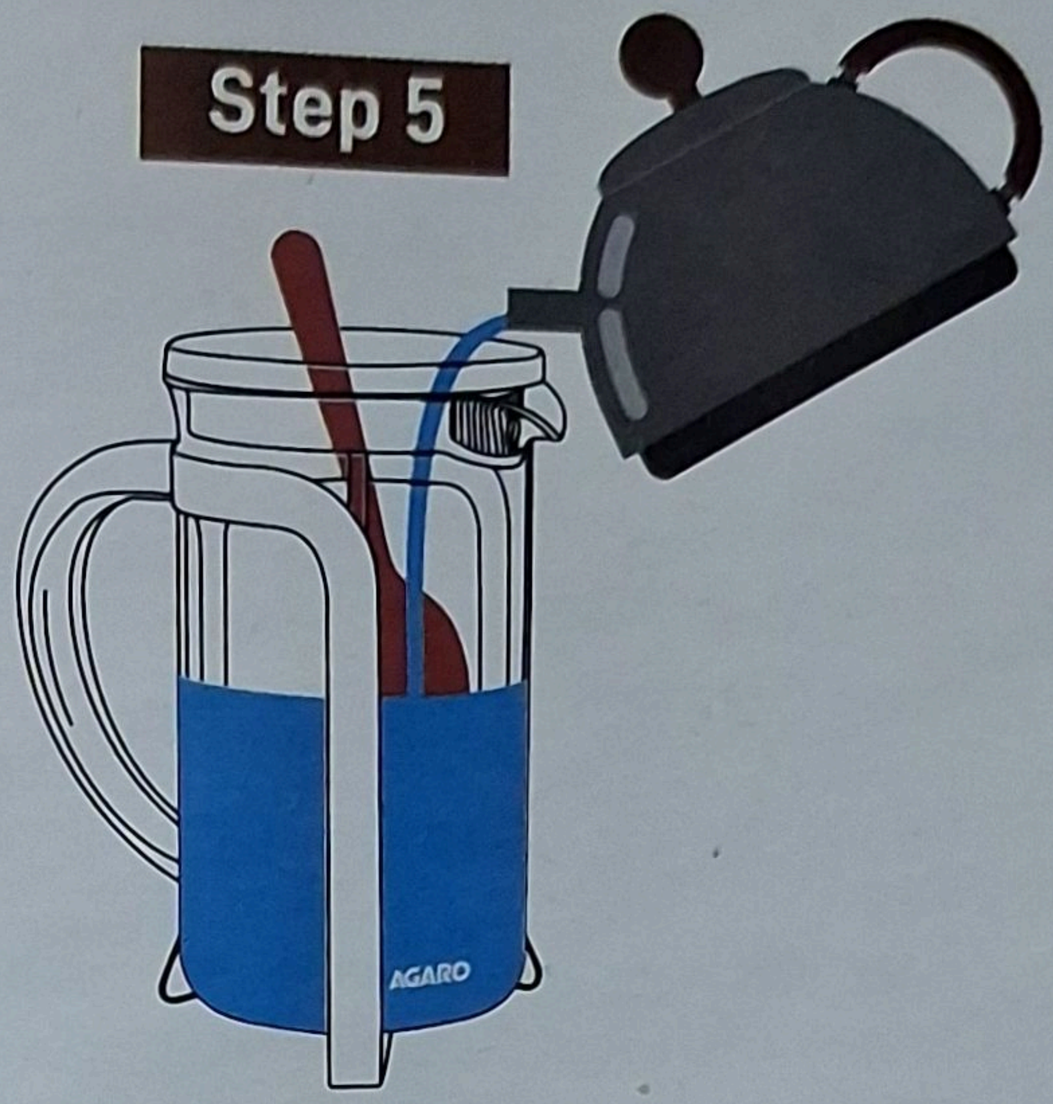

- Pour 1/2 of of your hot water evenly over grounds and stir gently for about 5 seconds to mix grounds evenly
- Pour the remaining amount of your hot water into the french press. Do not overfill! Leave at least a 1in space between the glass carafe and the bottom of the lid
- Place lid on french press with plunger pulled up and let steep for about 3 min

Step 6

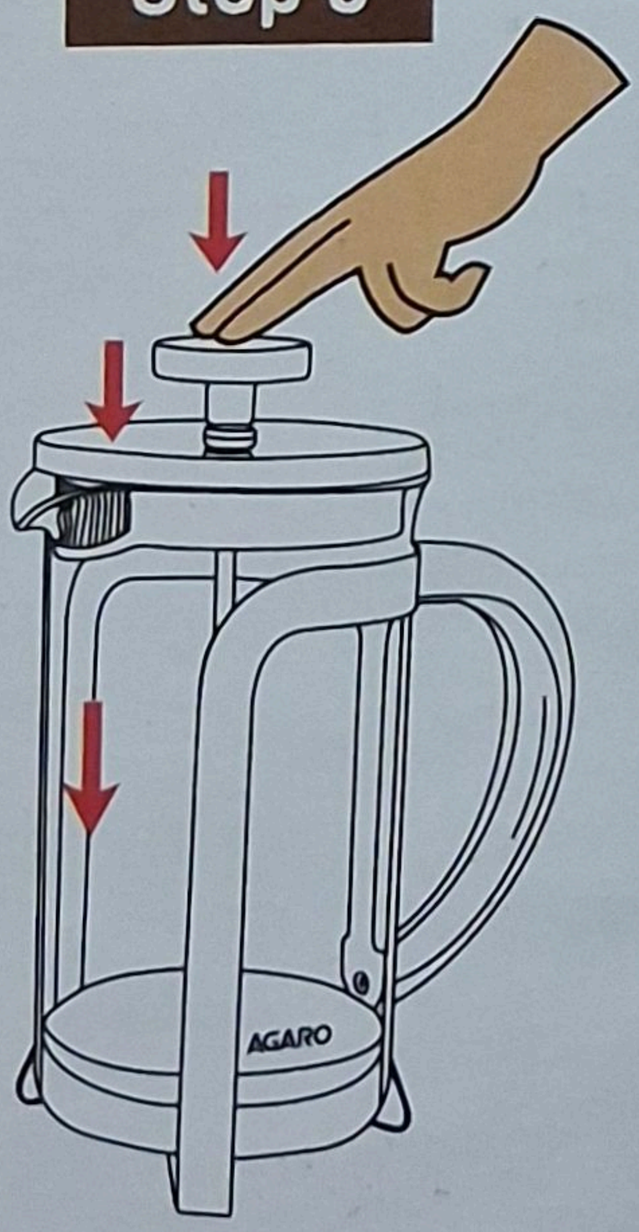

- Slowly press plunger down, to avoid hot liquid from flowing upwards, turn spout away from you when lowering plunger
- Important to pour, ensure lid is on, use one hand to hold the handle and the other hand to gently press top of the plunger to prevent the glass carafe from slipping out of the stainless-steel housing
- Pour into mug immediately. If coffee sits for too long in french press it becomes bitter

SAFETY PRECAUTIONS

CAUTION! Use extreme caution while handling all parts of the french press. Boiling/hot water is used to brew coffee and can burn.

While pouring, hold french press with 2 hands: one hand on the handle and the other hand by the round knob on the top of the plunger.

Wash thoroughly before first use.

Do not use if cracks or chips are found on glass carafe.

CAUTION - use caution while handling all parts of the french press, including the filters. There are sharp edges that need to be handled with care. The edges of the stainless-steel housing are very sharp! Be sure to inspect glass carafe for chips, cracks or other sharp edges before use.

Keep out of reach from children and infants.

CLEANING INSTRUCTIONS:

Remove the top/plunger assembly.
Remove the glass carafe from the stainless-steel housing by holding the stainless-steel housing with 1 hand and firmly twist and pull up on the glass with the other hand until it slides out.

There should be 3 main parts to clean: 1) Plunger assembly 2) Glass Carafe
3) Stainless- Steel Housing.

Wash all parts with dishwashing soap and warm water. AVOID cleaning stainless steel housing with brushes or steel wool as it will cause scratches and will dull the finish.

Screen Filter Replacement:

Unscrew the knob that is on top of the lid. Remove the lid and unscrew the small metal clasp that is located directly above the stainless steel spring filter. Slide the stainless steel spring filter and the 2 screen filters off the rod carefully, avoiding contact with the filters' sharp edges.